





The air bubble detector SONOCHECK® ABD06.xxx with analogue output is used to detect air, gas bubbles and foam in liquid filled tubes made of synthetic materials. It also serves as wet/dry indicator. Typical applications are in **biotechnology** or industrial applications in the automation, semiconductor or food and beverage industry (e.g. filling processes of glue, paint and lubricants) are typical. The SONOCHECK® ABD06 with analog output is designed as a component for fixed installation in machines and equipment. The sensor has no contact with the liquid. The sensors have a configurable analogue output for the distinction of bubble size in a wide range and are suitable especially for the use on hard plastic tubing and under harsh process conditions (concerning pressure, flow rate, vibration).

Technical data


ABD06.xxx with Analogue Output Air Bubble Detector				
Measuring method	Ultrasound			
Bubble sensitivity	Bubbles larger than approx. 1/3 of the inner tube diameter are detected (depending on tube properties, application and process characteristics)			
Measuring cycle	200 μs			
Response time / Holding time	Minimum 0.2 ms, maximum 2 ms, typical 1 ms (Furthermore, the holding time can be set in order to increase the duration of the output signal.)			
Operating temperature	+5 °C + 60 °C			
Storage temperature	-20 °C +70 °C			
Materials	Housing: Plastic, PET black (ABD06.102: PVC grey) Cover: Plastic, POM black, (ABD06.116 / ABD06.123: PET black; ABD06.102: PVC grey) Potting: PUR Cover clasp: stainless steel Handle (screw clamp): Plastics, PA, steel			

Requirements for tube	Parameter	Property				
(provide us with a tube sample, if possible; list of sensors and tubing properties behind)	Material	Hard or soft plastic tubes (e.g. PTFE, FEP, PFA, PVC, Silicone, PUR, PE, reinforced tubing; other materials on request or after test only)				
	Special features Tube must be smooth on outside, no fabric tube					
	Wall thickness	Depending on application, optimal 10 20 % of outer diameter for typical usage				
	Tube is inserted into sensor dry, no coupling medium required					
Requirements for liquid	Water, saline, other solutions, paint, glue or low-viscosity liquids containing no or few solids in general. NOTE! For applications with high-viscosity liquids (e.g. fats/special paints) screening tests must be made. Large amounts of foam in the liquid will be detected as air.					
Protection	IP67					
Operating voltage	+12 30 VDC, ripple max. 10 %, protection against reverse polarity					
Current consumption	Max. 50 mA (without switching current)					
Connecting cable	M12 sensor cable, 5 pins					
Pin assignment	Male connector at the sensor Male connector at the cable 4					
	Pin Colour C	onnection				
	1 Brown Po	ower supply voltage +12 30 VDC				
	2 White R	S-485 A				
	3 Blue G	round				
	4 Black O	utput				
	5 Grey R	S-485 B				
	Shielding If available: must be grounded on the side of host.					
Outputs (specification can be adopted with the Monitor software)	Current output 0/4 20 mA (default factory setting)					
		RS-485 service interface (default factory setting)				

Configuration as:

Current output (factory setting)

The current output can be configured in the range of 0 ... max. 25 mA

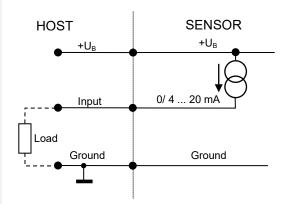

Example: Measuring range 4 ... 20 mA / error output 0 mA or 22 mA



CAUTION! Pay attention to the max. load depending on the operating voltage: 12 V: 0 ... 400 Ω | 24 V: 0 ... 200 Ω | 30 V: 0 ... 100 Ω


Output specification (default configuration)

State	Current output
Air / Bubble	20 mA
Fluid	4 mA
Internal error (self-test)	0 mA

Configuration as:

Switching output / **PWM** output

PNP und PWM, switching current max. 25 mA

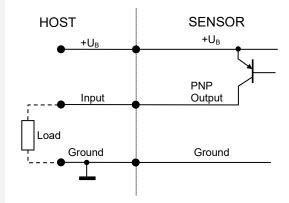

NOTE! In the event of a short circuit the current is limited internally to approx. 33 mA

Output specification (default configuration


State	Level of PNP-Output
Air / Bubble	+24 V
Fluid	Ground
Internal error (self-test)	+24 V

Configuration as: Voltage output

The current output is used as voltage output. Internally a shunt (500 Ω) is connected to output.

The voltage output can be configured in the range of 0 ... max. 12.5 V.

Example: Measuring range 2 ... 10 V / error output 0 V or 11 V

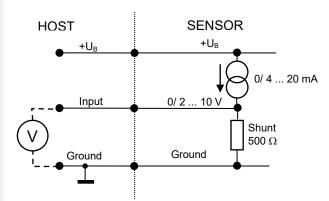


CAUTION! Pay attention to the internal resistance (shunt) at the connection of voltage output.

Adhere to the maximum output voltage depending on the operating voltage: 12 V: 0 ... 9 V | 14 V: 0 ... 10 V | 18 V: 0 ... 12.5 V

RS-485 service interface

Half-duplex operation / 115.200 baud / no parity / 1 stop bit / no handshaking / Bus operation not possible

Recommended electrical connection of the RS-485 interface

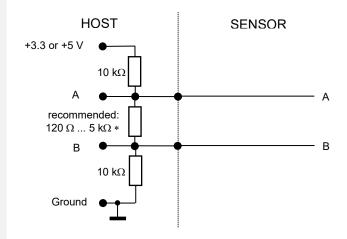

^{*} According to bus standard: depending on number of sensors and cable length

NOTE! For details of the protocol please contact our service. If the interface is not used, the two pins A and B shall remain open.

Directives / Standards	Electromagnetic compatibility, tests in compliance with				
	DIN EN 61326-1: 2013 EN 61000-4-3 EMC, radiated radio-frequency - electromagnetic field				
	immunity, test result A, test with 10 V/m (0.15 1000 MHz)				
	EN 61000-4-4 EMC, electrical fast transient/burst immunity test, test result A (see restrictions below)				
	EN 61000-4-6 EMC, immunity to conducted disturbances, induced by radio-frequency fields, test result A, test with 10 V/m				
	EN 55011 Electromagnetic disturbance characteristics, limit 30 dBμV/m				
	i NOTE! For testing typical settings for bubble detection have been applied. The interference immunity depends on a reasonable configuration. Operating with very high bubble sensitivity combined with a very short response time can cause disturbances of the system, induced by electromagnetic disturbing, pressure changing, mechanical vibration, etc.				
Scope of delivery	Bubble detector type ABD06.xxx with analogue output,				
	 Cover with screws / hinged cover / hinged cover and handle, dimensions adjusted to sensor and tube 				
	User documentation				
Accessories /	M12 sensor cable, 5 pins, length 2 m / 5 m / 10 m				
Options	ABD Monitor, consisting of:				
	USB Data Converter Type 011 (for RS-485)				
	Power supply				
	 USB cable, type A-B, length 2 m Software ABD Monitor 				
	With the help of software ABD Monitor (optional) for configuration of the sensors and assistance in diagnostics:				
	Bubble sensitivity (threshold air / liquid)				
	Response time / holding time for output conditions				
	Output specifications, e.g. of serial output, switching output or PWM value				
	Furthermore measurement values can be recorded for diagnosis.				
Customization	Customized modifications for special applications upon request (e.g. adapted channel width, individual output specifications or settings)				



Overview of sensor and tubing dimensions

The sensors series ABD06 are suitable for a variety of tubes.

The sensor version depends on the tube diameter, the hardness of the tube and its wall thickness. Please note, that because of diverse tubing dimensions and materials an aptitude test has to be made. Please provide us with a tube sample (minimum length 30 cm) and contact our service to find the appropriate sensor and cover.

Note, that the cover is necessary to fix the tubing in the measuring channel to ensure correct coupling. The cover sizes and the bridge as well depend on the tubing properties and the application. Contact our Service to determine the correct cover and order number.

Dimensions, listed in the following, are guiding values:

SONOCHECK®	Sensor		Tube Dimensions [mm]		Tube Dimensions [inch]	
type	CW	СН	OD	ID	OD	ID
Sensors with scr	ew cover					
ABD06.115	5.6 mm	11.0 mm	6.0 9.5 mm	2.5 7.0 mm	0.235" 0.375"	0.1" 0.275"
ABD06.114	8.0 mm	13.0 mm	8.0 11.5 mm	4.0 9.0 mm	0.315" 0.455"	0.175" 0.355"
ABD06.119	11.0 mm	17.0 mm	12.0 16.0 mm	6.0 11.0 mm	0.470" 0.630"	0.235" 0.435"
Sensors with hin	Sensors with hinged cover					
ABD06.122	3.4 mm	6.5 mm	3.9 5.5 mm	1.6 4.5 mm	0.156" 0.219"	0.063" 0.172"
ABD06.125	5.2 mm	8.0 mm	5.9 7.9 mm	2.0 6.4 mm	0.234" 0.313"	0.078" 0.250"
ABD06.120	7.2 mm	11.5 mm	8.0 11.0 mm	3.5 8.0 mm	0.315" 0.435"	0.140" 0.315"
ABD06.117	12.0 mm	15.5 mm	13.0 16.0 mm	6.5 13.0 mm	0.500" 0.630"	0.255" 0.510"
ABD06.121	15.5 mm	20.0 mm	16.0 22.0 mm	10.0 17.0 mm	0.630" 0.865"	0.395" 0.670"
Sensors with handle (screw clamp)						
ABD06.102	24.5 mm	19.5 mm	25.4 28.6 mm	15.9 22.2 mm	1.000" 1.125"	0.625" 0.875"
ABD06.116	26.0 mm	28.0 mm	26.6 34.5 mm	19.1 25.4 mm	1.050" 1.360"	0.750" 1.000"
ABD06.123	32.0 mm	28.0 mm	34.5 35.7 mm	25.4 27.0 mm	1.360" 1.405"	1.000" 1.050"

Abbreviations: CW = channel width at the narrowest part of the channel; CH = channel height; OD = outer diameter; ID = inner diameter




SONOCHECK® type	Product No.	Dimensions L x W x H [H max]	Mounting Sc W Sc L (threaded holes on rear side, see technical drawings)		
Sensors with scr	ew cover				
ABD06.115	200 02 0116	35 x 50 x 32 mm	_		
ABD06.114	200 02 0114	35 x 50 x 34 mm	2 x M4, depth 8 mm 42 mm 27 mm		
ABD06.119	200 02 0125	35 x 50 x 38 mm			
Sensors with hinged cover					
ABD06.122	200 02 0048	45 x 73 x 32 mm			
ABD06.125	200 02 0154	45 x 73 x 34 mm	_		
ABD06.120	200 02 0024	45 x 73 x 34 mm	2 x M4, depth 8 mm 42 mm 27 mm		
ABD06.117	200 02 0137	45 x 73 x 39 mm	_		
ABD06.121	200 02 0126	45 x 73 x 44 mm			
Sensors with handle (screw clamp)					
ABD06.102	200 02 0081	40 x 100* x 55 [75] mm	2 x M6, depth 8 mm 54 mm 30 mm		
ABD06.116	200 02 0021	40 x 100* x 67.5 [85] mm	4 x M6, depth 10 mm 70 mm 30 mm		
ABD06.123	200 02 0148	40 x 100* x 67.5 [85] mm	4 x M6, depth 10 mm 70 mm 30 mm		

Abbreviations: L = sensor length; W = sensor width; H = sensor height; H max = height with handle; Sc W = screw distance in sensor width; Sc L = screw width in sensor length

^{*} Value depending on handle position, approx. 10 mm


Technical drawings

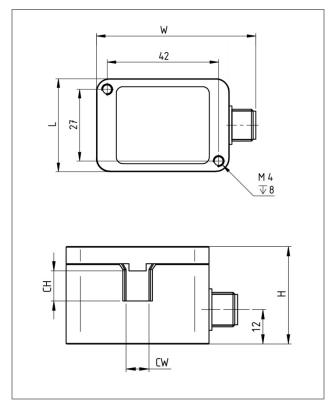

Ф M4 42 **₩8** W H max CW

Sensor design with screw cover

Sensor design with hinged cover

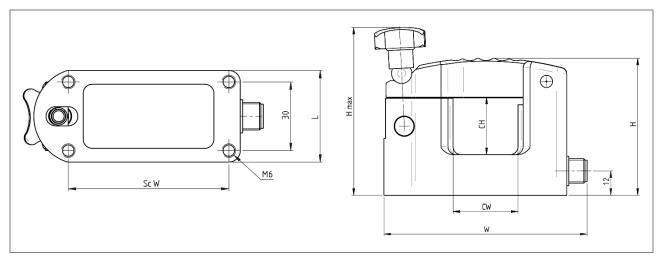

Sensor design with handle

Drawings are not to scale. Dimensions in mm, unless otherwise specified. Information is subject to change without notice. SONOTEC is a registered trademark.

HEADQUARTERS GERMANY

SONOTEC GmbH Nauendorfer Str. 2 06112 Halle (Saale) Germany

Tel.: +49 (0)345 / 133 17- 0 sales_eu@sonotec.de www.sonotec.eu

AMERICAS SONOTEC US Inc. 190 Blydenburgh Rd Suite 8, 2nd Floor Islandia, New York 11749, USA

Phone: +1 631 / 415 4758 sales@sonotecusa.com www.sonotecusa.com

Revision: 1.5L | 2022-08-30